




Apeos C7070 / C6570 / C5570 / C4570 / C3570 / C3070




No. and Component

- 1) <Power Saving> button
- 2) Jobs
- 3) <Home> button
- 4) Data indicator
- 5) Login / Out
- 6) Pins
- 7) Address Book

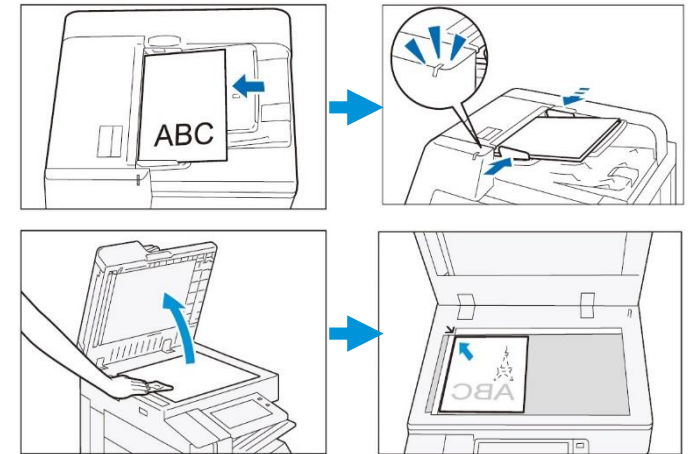


For assistance, please call 2513 2513.

Copy

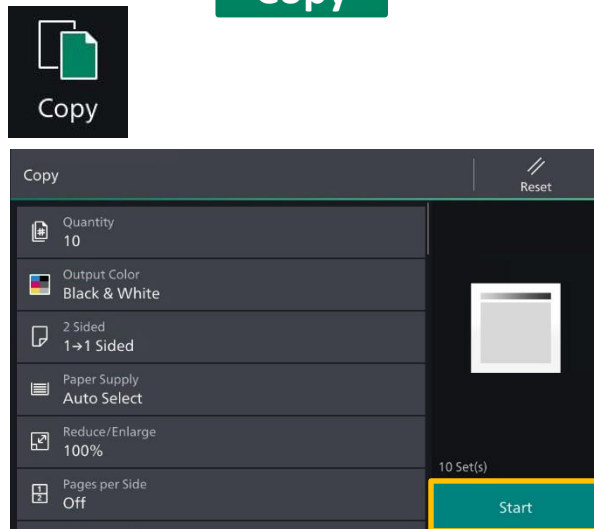


Configure the print quantity and the setting items. Tap on [Start].


Scan

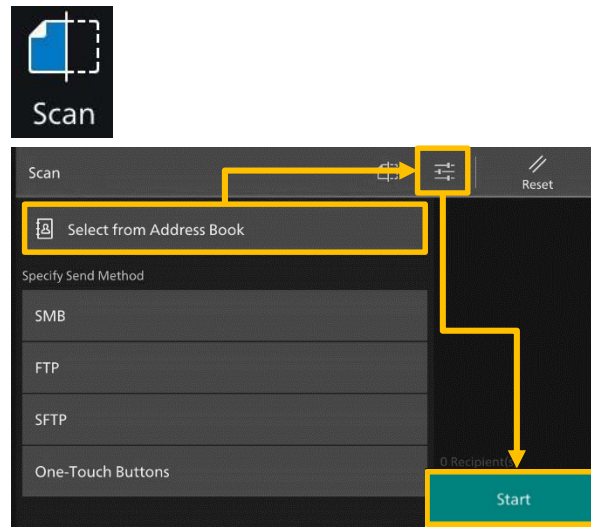

Specify the recipient by tapping on the [Address Book]. Configure the [Setting Items] and tap on [Start].

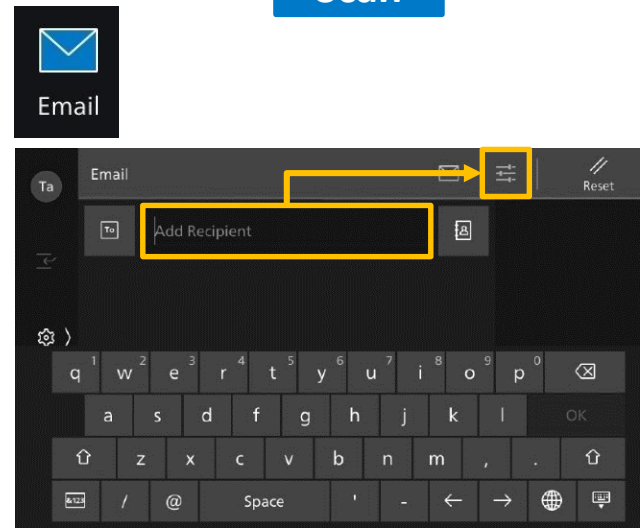


Specify recipient by using [Keyboard] or by tapping on the Address Book. Configure the [Setting Items] and tap on [Start].

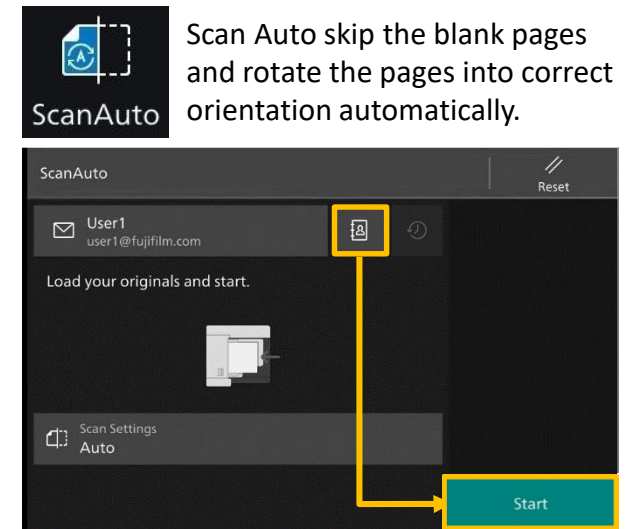

Scan Auto skip the blank pages and rotate the pages into correct orientation automatically.


Specify recipient from [Address Book], then tap on [Start].

Stop Copy

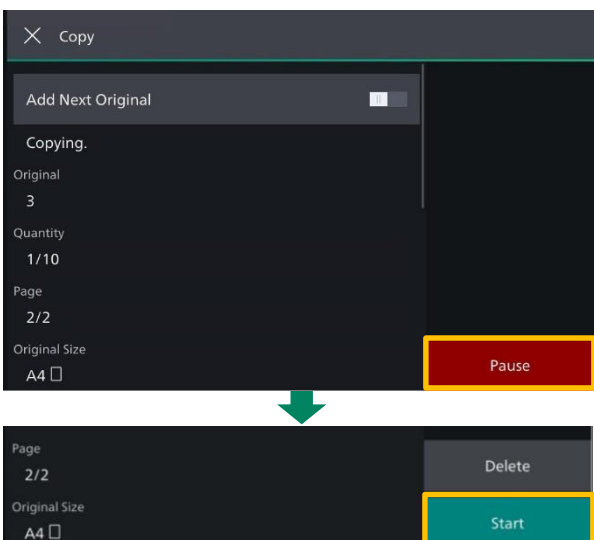


Tap on [Pause], then tap on [Delete].

Fax

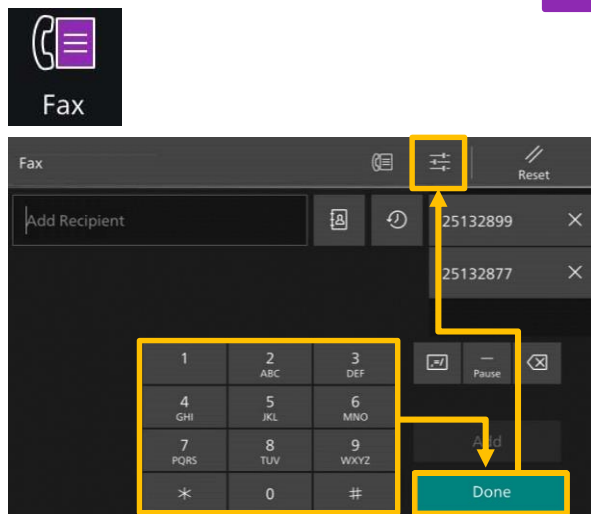

Enter the recipient with the [Keyboard] and tap on [Done]. Configure the [Setting Items] and tap on [Start].

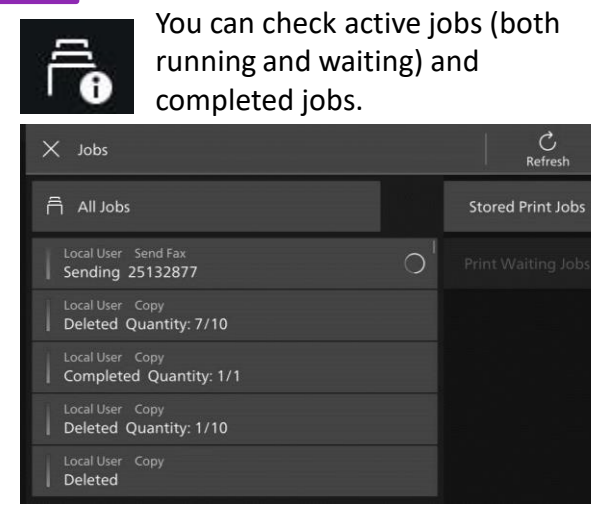

You can check active jobs (both running and waiting) and completed jobs.

After fax transmission, tap on [Info] to verify the job completion status.

Enquiry

Scan QR Code for more instruction.



Visit below website for more online support.
<https://support-fb.fujifilm.com>